


## **SCORPION // FITTING INSTRUCTIONS**

## HAND BUILT

Car	Audi TTRS 8S MK3 (GPF and non GPF models)	Part No.	SAU081CF
Year	2017-Current	Fit Kits	391FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 80mm

## Estimated Fitting Time: 1 Hour 30 Minutes

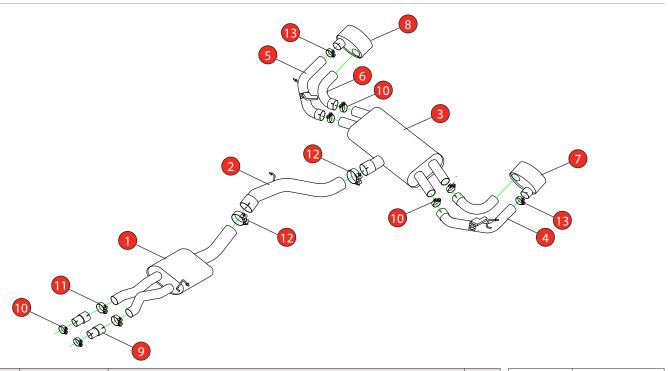

NO.	PART NO.	DESCRIPTION	QTY	DATE	03/05/2022
1	729AU	Resonated Centre Section	1	ISSUE	00
2	731AU	Link Pipe	1	AUTHORISED	S Shipley
3	732AU	Rear Silencer	1		
4	733AU	L/H Valved Outer Trim Connecting Pipe	1		
5	734AU	R/H Valved Outer Trim Connecting Pipe	1		
6	861AU	L/H & R/H Inner Trim Connecting Pipe	2		
7	Z023.10160	L/H Carbon Ascari Evo Trim	1		
8	Z023.10161	R/H Carbon Ascari Evo Trim	1		
Fit Ki	t				
9	AD71	Adaptor	2		
10	Z016.10070	65mm H/D Clamp	6		
11	Z016.10063	72mm H/D Clamp	2		
12	Z016.10069	79-85mm H/D Clamp	2		
13	Z016.10064	63-68mm H/D Clamp	2		
	STIRE SCORDIGALSVS	I TEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY			



Э

SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.





## **SCORPION // FITTING INSTRUCTIONS**

HAND BUILT

Car	Audi TTRS 8S MK3 (GPF and non GPF models)	Part No.	SAU081CF			
Year	2017-Current	Fit Kits	391FK			
Notes	Where not supplied use original fittings	Features Pipe Diameter:- 80mm				
Estimated Fitting Time: 1 Hour 30 Minutes						









f 🕑 🖾 STAY CONNECTED TO RED POWER.

A) Remove the electronic actuator from the original exhaust.

B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.

C) Use the M6 bolts and washers to fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.

D) Before fitting the Scorpion system, you must rotate the rear mounts by 180° on both sides of the car.

