


## **SCORPION** // FITTING INSTRUCTIONS


## HAND BUILT

Car	Audi SQ2	Part No.	SAUP090
Year	2019-Current	Fit Kits	333FK
Notes	Where not supplied use original fittings. The original system requires cutting.	Features	Pipe Diameter:- 70mm

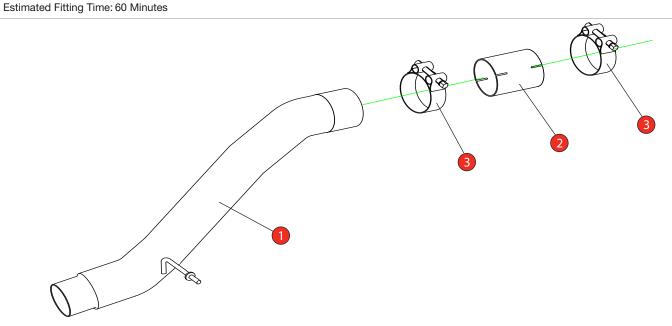

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A
1	785AU	Centre Resonator Delete Pipe	1	DATE	21/01/21
Eit Ki	Fit Kit			ISSUE	00
				AUTHORISED	M.Ydlibi
2	AD113	Adapter To Original System	1		
3	Z016.10063	72mm H/D Clamp	2		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

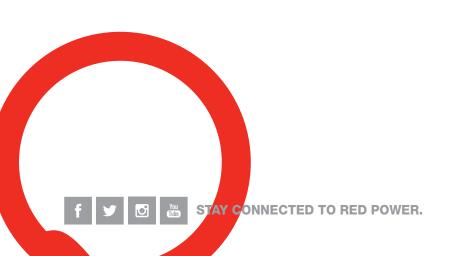







## SCORPION // FITTING INSTRUCTIONS



Car	Audi SQ2	Part No.	SAUP090			
Year	2019-Current	Fit Kits	333FK			
Notes	Where not supplied use original fittings. The original system requires cutting.	Features	Pipe Diameter:- 70mm			
Estimated Fitting Time: 60 Minutes						





Remove the original system, place the resonator delete pipe over the top of the system.

Mark where the resonator delete pipe finishes. This is where you need to cut your original system. Once cut de-bur the edges as the adaptor needs to slide over the pipe work.



