


SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	Audi S3 8Y	Part No.	SAUS094
Year	2020-Current	Fit Kits	305FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 80mm

Estimated Fitting Time: 2 Hours

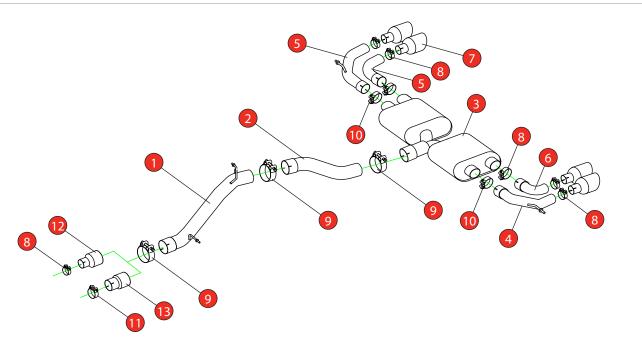

NO.	PART NO.	DESCRIPTION	QTY	E-MAR
1	764VW	Non-resonated Centre Section	1	DATE
2	765VW	Link Pipe	1	ISSUE
3	766VW	Rear Silencer	1	AUTHO
4	810AU	L/H Outer Trim Connecting Pipe	1	
5	811AU	R/H Outer Trim Connecting Pipe	1	
6	812AU	L/H & R/H Inner Trim Connecting Pipe	2	
7	Z043.10213	Polished Ø114mm Daytona Trim	4	
Fit Ki	it			
8	Z016.10064	63-68mm Clamp	7	
9	Z016.10069	79-85mm Clamp	3	
10	Z016.10070	66mm H/D Clamp	2	
11	Z016.10056	73-79mm Clamp	1	
12	AD103	Adaptor (USE TO FIT TO O.E DOWNPIPE)	1	
13	AD107	Adaptor (USE TO FIT TO Ø76mm DOWNPIPE)	1	

	E-MARK	N/A
1	DATE	14/06/21
	ISSUE	00
	AUTHORISED	M.Ydlibi

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

С



STAY CONNECTED TO RED POWER.



SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	Audi S3 8Y	Part No.	SAUS094
Year	2020-Current	Fit Kits	305FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 80mm



A) Both of the rear mounting points need rotating 180° when fitting the Scorpion exhaust.

Once happy with fitment of Scorpion Exhaust, fully tighten up all clamps and fixing and plug in the electronic valve motors.



