


SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	Audi S3 (8P)	Part No.	SAUX074
Year	2006-2012	Fit Kits	262FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm / 3″

Estimated Fitting Time: 3 Hours

Ы

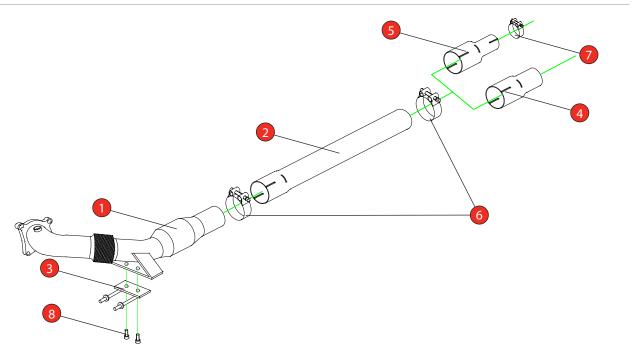

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A	
1	594VW	Downpipe With A High Flow Sports Catalyst	1	DATE	03/01/17	
2	596VW	Link Pipe	1	ISSUE	00	
3	677VW	Mounting Bracket	1	AUTHORISED	M.Ydlibi	
Fit Ki	t					
4	AD87	Adaptor (USE TO FIT TO SCORPION SYSTEM)	1	Before removing the original system the hose attached to the valve needs to be disconnected and fastened out of sight.		
5	AD88	Adaptor (USE TO FIT TO O.E SYSTEM)	1			
6	Z016.10062	79mm H/D Clamp	2			
7	Z016.10001	59-63mm Clamp (USE TO FIT TO O.E SYSTEM)	1			
8	Z017.10808	M8 x 16mm Cap Head bolt	2			

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

