




| Car | Audi SQ2 | Part No. | SAUX090 |
|-------|--|----------|----------------------|
| Year | 2019-Current | Fit Kits | 403FK |
| Notes | Where not supplied use original fittings | Features | Pipe Diameter:- 80mm |

Estimated Fitting Time: 6 Hours

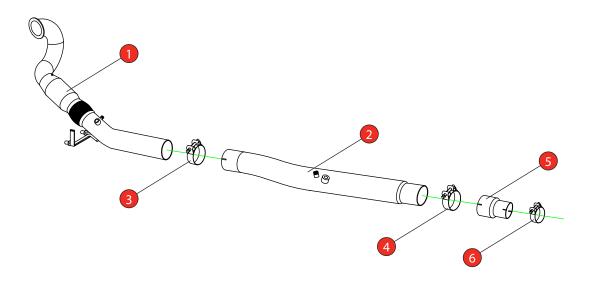

| NO. | PART NO. | DESCRIPTION | QTY | |
|---------|------------|---|-----|--|
| 1 | 787VW | Downpipe With A high Flow Sports Catalyst | 1 | |
| 2 | 862AU | Front Link Pipe | 1 | |
| Fit Kit | | | | |
| 3 | Z016.10069 | 79-85mm Clamp | 1 | |
| 4 | Z016.10062 | 79mm H/D Clamp | 1 | |
| 5 | AD69 | Adaptor (USE TO FIT TO O.E SYSTEM) | 1 | |
| 6 | Z016.10064 | 63-68mm Clamp (USE TO FIT TO O.E SYSTEM) | 1 | |

| CLASSIFICATION | Motorsport Use Only | |
|----------------|---------------------|--|
| HOMOLOGATED | No | |
| DATE | 27/06/2022 | |
| ISSUE | 00 | |
| AUTHORISED | S Shipley | |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.





SCORPION // FITTING INSTRUCTIONS





| Car | Audi SQ2 | Part No. | SAUX090 |
|-------|--|----------|----------------------|
| Year | 2019-Current | Fit Kits | 403FK |
| Notes | Where not supplied use original fittings | Features | Pipe Diameter:- 80mm |





- A) Remove Lambda Probe from OE catalyst, then remove cable from clips indicated. (x4)
- B) Feed Lambda cable down the right hand side (as you look at the engine)
- C) Ensure Lambda cable misses the gear cables, pass to the right hand side (as you look at engine)
- D) Take Lambda cable under the engine.Fit probe into Sensor boss and tighten.
- E/F) Re-fit all cables and hoses ensuring everything is clipped out the way and not near any moving parts.





















