




Car	BMW M2 (F87)	Part No.	SBM075C
Year	2016-2018	Fit Kits	276FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 80mm

Estimated Fitting Time: 90 Minutes

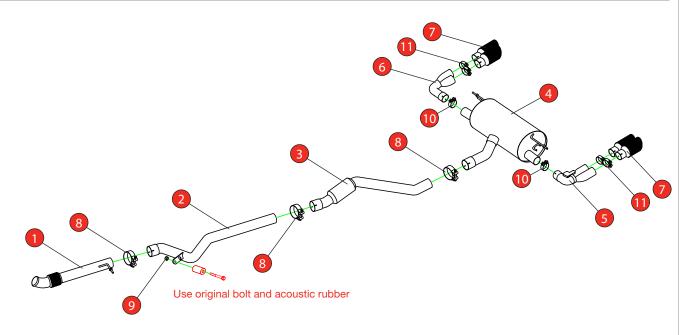

NO.	PART NO.	DESCRIPTION	QTY		
1	736BM	Front Pipe	1		
2	741BM	Link Pipe	1		
3	737BM	Centre Section	1		
4	738BM	Rear Silencer	1		
5	739BM	L/H Trim Connecting Pipe With Electronic Valve	1		
6	740BM	R/H Trim Connecting Pipe	1		
7	Z023.10056	Black Ceramic Coated Ø90mm Daytona Trim	4		
Fit Kit					
8	Z016.10069	79-85mm Clamp	3		
9	Z017.10062	M8 Nyloc Nut	1		
10	Z016.10070	65mm H/D Clamp	2		
11	Z016.10064	63-68mm Clamp	4		

E-MARK	N/A
DATE	01/02/21
ISSUE	01
AUTHORISED	M.Ydlibi

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.





SCORPION // FITTING INSTRUCTIONS





Car	BMW M2 (F87)	Part No.	SBM075C
Year	2016-2018	Fit Kits	276FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 80mm

Estimated Fitting Time: 90 Minutes

















- A) Remove the electronic actuator from the original exhaust.
- B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.
- C) Use the M6 bolts and washers to fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.
- D) Remove the acoustic rubber from the original exhaust and fit it to the Scorpion centre section following the line diagram above.

