


SCORPION // FITTING INSTRUCTIONS




Car	BMW M135i xDrive F40 GPF Model	Part No.	SBM083C
Year	2019-Current	Fit Kits	369FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 70mm

Estimated Fitting Time: 1 Hour 30 Minutes

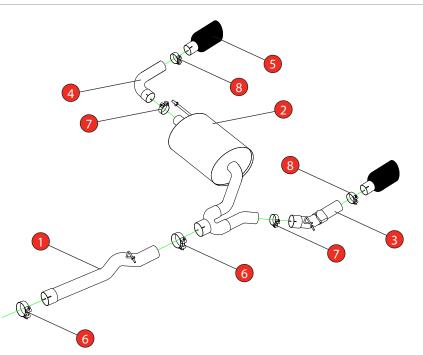

NO.	PART NO.	DESCRIPTION	QTY	DATE	27/07/2023
1	812BM	Link Pipe	1	ISSUE	01
2	813BM	Rear Silencer	1	AUTHORISED	S Shipley
3	814BM	L/H Valved Trim Bend	1		
4	815BM	R/H Trim Bend	1		
5	Z023.10153	Ø114mm Black Ceramic Coated Daytona Trim	2		
Fit Ki	it				
6	Z016.10063	72mm H/D Clamp	2		
7	Z016.10070	65mm H/D Clamp	2		
8	Z016.10064	63-68mm Clamp	2		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

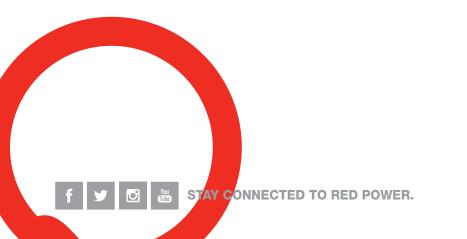






SCORPION // FITTING INSTRUCTIONS



Car	BMW M135i xDrive F40 GPF Model	Part No.	SBM083C	
Year	2019-Current	Fit Kits	369FK	
Notes	Where not supplied use original fittings. Original system requires cutting	Features	Pipe Diameter:- 70mm	
Estimated Fitting Time: 1 Hour 30 Minutes				

Cutting Instructions :

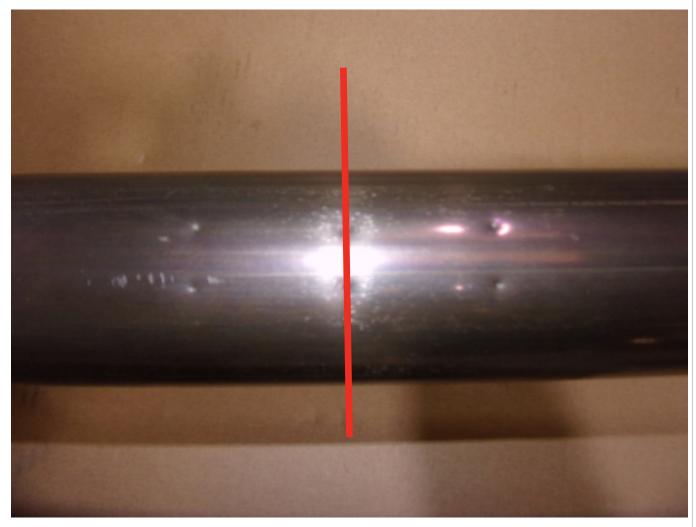

To make it easier to cut the exhaust we reccomend remoiving it from the car. Find the 3 pairs of indents and use the middle pair to mark out the cutting line. Cut along the line and de-bur the edges. Re-fit the original GPF and fit the Scorpion GPF-back following the line diagram above.







SCORPION // FITTING INSTRUCTIONS



Car	BMW M135i xDrive F40 GPF Model	Part No.	SBM083C
Year	2019-Current	Fit Kits	369FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 70mm
Estimated Fitting Time: 1 Hour 30 Minutes			









A) Remove the electronic actuator from the original exhaust.

B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.

C) Fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.

