




Car	BMW 128ti F40 GPF Model	Part No.	SBM085CF
Year	2021 -Current	Fit Kits	378FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 70mm


Estimated Fitting Time: 1 Hour 30 Minutes

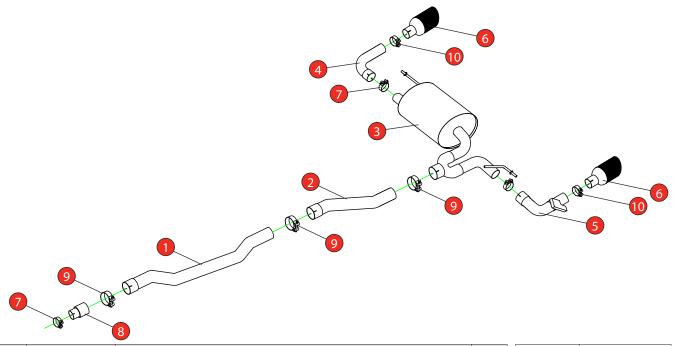

NO.	PART NO.	DESCRIPTION	QTY
1	834BM	Centre Pipe	1
2	835BM	Link Pipe	1
3	836BM	Rear Silencer	1
4	837BM	R/H Trim Bend	1
5	838BM	L/H Valved Trim Bend	1
6	Z023.10162	Ø114mm Carbon Fibre Ascari Trim	2
Fit Kit			
7	Z016.10070	65mm H/D Clamp	3
8	AD02	Adaptor	1
9	Z016.10063	72mm H/D Clamp	3
10	Z016.10064	63-68mm Clamp	2

E-MARK	N/A
DATE	16/09/21
ISSUE	00
AUTHORISED	M.Ydlibi

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

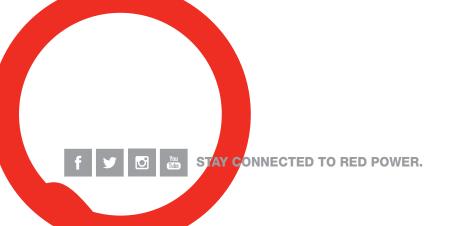








Car	BMW 128ti F40 GPF Model	Part No.	SBM085CF
Year	2021 -Current	Fit Kits	378FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 70mm

Estimated Fitting Time: 1 Hour 30 Minutes

Cutting Instructions:



To make it easier to cut the exhaust we reccomend remoiving it from the car. Find the 3 pairs of indents and use the middle pair to mark out the cutting line. Cut along the line and de-bur the edges. Re-fit the original GPF and fit the Scorpion GPF-back following the line diagram above.

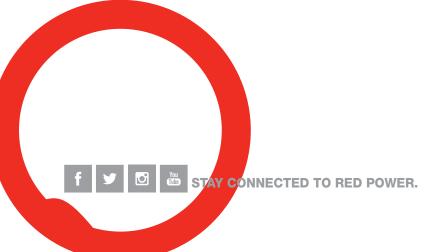









Car	BMW 128ti F40 GPF Model	Part No.	SBM085CF
Year	2021 -Current	Fit Kits	378FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 70mm

Estimated Fitting Time: 1 Hour 30 Minutes







- A) Remove the electronic actuator from the original exhaust.
- B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.
- C) Fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.



