




| Car | BMW M235i Gran Coupe xDrive F44 GPF Model | Part No. | SBM088CF |
|-------|---|----------|----------------------|
| Year | 2019-Current | Fit Kits | 394FK |
| Notes | Where not supplied use original fittings. Original system requires cutting. | Features | Pipe Diameter:- 70mm |

Estimated Fitting Time: 1 Hour 30 Minutes

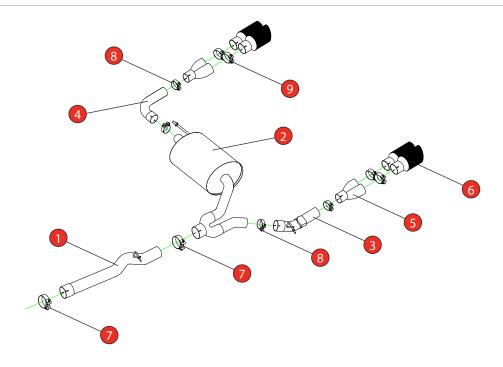

| NO. | PART NO. | DESCRIPTION | QTY | |
|---------|------------|--------------------------------|-----|--|
| 1 | 812BM | Link Pipe | 1 | |
| 2 | 813BM | Rear Silencer | 1 | |
| 3 | 814BM | L/H Valved Trim Bend | 1 | |
| 4 | 815BM | R/H Trim Bend | 1 | |
| 5 | 863BM | Y-Piece | 2 | |
| 6 | Z023.10158 | Ø90mm Carbon Fibre Ascari Trim | 4 | |
| Fit Kit | | | | |
| 7 | Z016.10063 | 72mm H/D Clamp | 2 | |
| 8 | Z016.10070 | 65mm H/D Clamp | 4 | |
| 9 | Z016.10064 | 63-68mm Clamp | 4 | |

| E-MARK | N/A | |
|------------|----------|--|
| DATE | 25/05/22 | |
| ISSUE | 00 | |
| AUTHORISED | M.Ydlibi | |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.









| Car | BMW M235i Gran Coupe xDrive F44 GPF Model | Part No. | SBM088CF |
|-------|---|----------|----------------------|
| Year | 2019-Current | Fit Kits | 394FK |
| Notes | Where not supplied use original fittings. Original system requires cutting. | Features | Pipe Diameter:- 70mm |

Estimated Fitting Time: 1 Hour 30 Minutes

Cutting Instructions:



To make it easier to cut the exhaust we reccomend remoiving it from the car. Find the 3 pairs of indents and use the middle pair to mark out the cutting line. Cut along the line and de-bur the edges. Re-fit the original GPF and fit the Scorpion GPF-back following the line diagram above.












| Car | BMW M235i Gran Coupe xDrive F44 GPF Model | Part No. | SBM088CF |
|-------|---|----------|----------------------|
| Year | 2019-Current | Fit Kits | 394FK |
| Notes | Where not supplied use original fittings. Original system requires cutting. | Features | Pipe Diameter:- 70mm |

Estimated Fitting Time: 1 Hour 30 Minutes





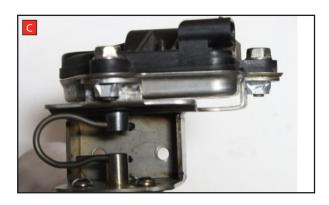

- A) Remove the electronic actuator from the original exhaust.
- B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.
- C) Fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.

