


CAR	Mercedes A-Class A45 AMG 4MATIC 2.0 TURBO	PART NO.	SMB003
YEAR	13-Current	FIT KITS	053 FK
NOTES	Where not supplied use original fittings	FEATURES	Pipe Diameter:- 76mm/3"

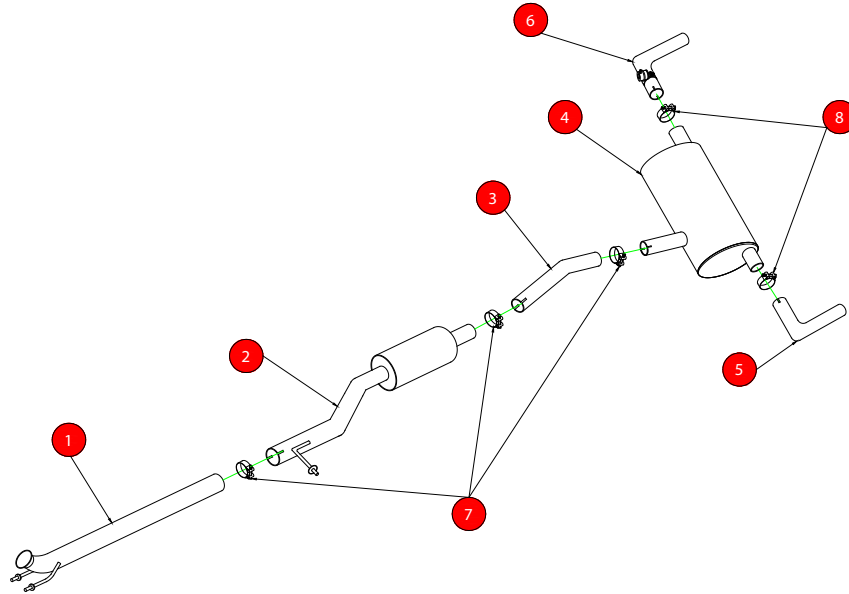

NO.	PART NO.	DESCRIPTION	QTY
1	015MB	Front Pipe	1
2	016MB	Centre Silencer	1
3	017MB	Link Pipe	1
4	018MB	Rear Silencer	1
5	019MB	L/H Tail Pipe	1
6	020MB	R/H Tail Pipe With Red Power Valve	1
Fit Kit			
7	Z016.10062	79mm H/D Clamp	3
8	Z016.10064	65mm H/D Clamp	2

E-MARK	N/A
DATE	15/09/15
ISSUE	00
AUTHORISED	M.YDLIBI

Fitting instructions overleaf:


**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Checked By \_\_\_\_\_

Case 10


BIKE	Mercedes A-Class A45 AMG 4MATIC 2.0 TURBO	PART NO.	SMB003
YEAR	13-Current	FIT KITS	053 FK
NOTES	Where not supplied use original fittings	FEATURES	Pipe Diameter:- 76mm/3"

CONTINUED FROM OVERLEAF:

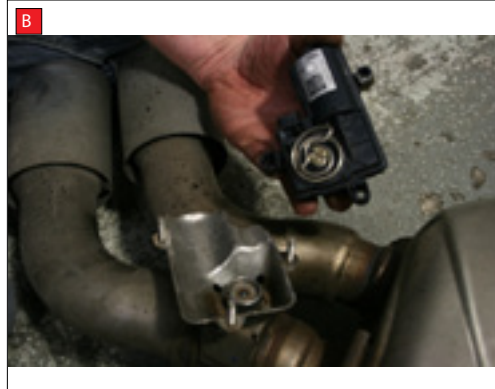

A) After you have removed O.E exhaust you will need to remove the right hand original valve . remove 3 x 8mm nuts from the valve, keep safe as you will need them to bolt the electronic valve motors to Scorpion Exhaust).

B) Lift up the motor. You will now be able to see the torsion spring (This must stay on the electronic valve motor to work with Scorpion Exhaust **DO NOT REMOVE SPRING AND DO NOT TURN MOTOR**)

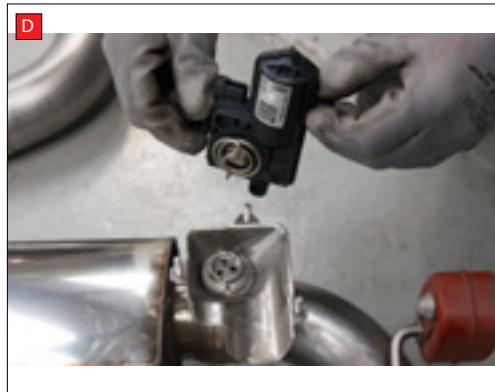

C) Rotate Scorpion valve so its in the same position and the O.E electronic valve motor)

D) Once happy spring and Scorpion valve position are in line now fit the O.E electronic valve motor.

E) Using the 3 x 8mm O.E nuts secure in place.

