


<b>Car</b>	Mini Cooper S R55 / 56 / R57 / R58 / R59	<b>Part No.</b>	SMNC011
<b>Year</b>	2007-2014	<b>Fit Kits</b>	N/A
<b>Notes</b>	Where not supplied use original fittings	<b>Features</b>	Pipe Diameter:- 70mm

Estimated Fitting Time: 4 Hours

**REMOVE TOP TWO STUDS FROM TURBO PRIOR TO FITTING DE-CAT TO ENABLE EASIER FITMENT**

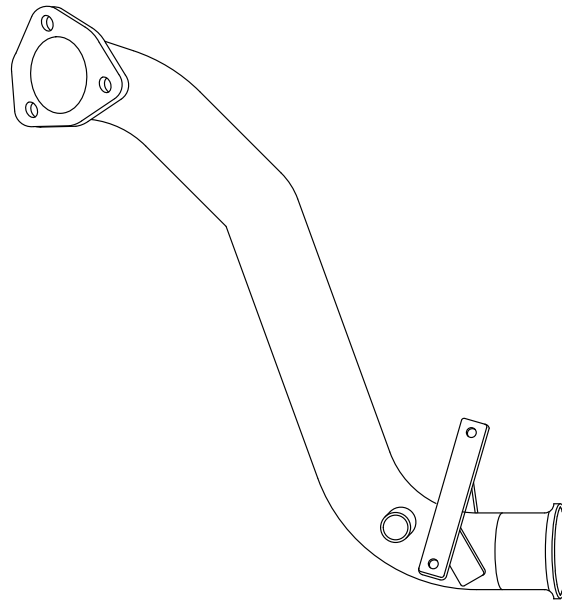


NO.	PART NO.	DESCRIPTION	QTY
1	671BM	De-cat Downpipe	1

CLASSIFICATION	Motorsport Use Only
HOMOLOGATED	No
DATE	13/02/2019
ISSUE	02
AUTHORISED	J.Harkin

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

- 1) Remove the original heat shield prior to removing the original downpipe.
- 2) Remove the original downpipe retaining all fittings.
- 3) Fit the Scorpion downpipe using the original fittings.
- 4) Once you're happy the downpipe is fitted correctly refit the original heat shield and lambda sensors.

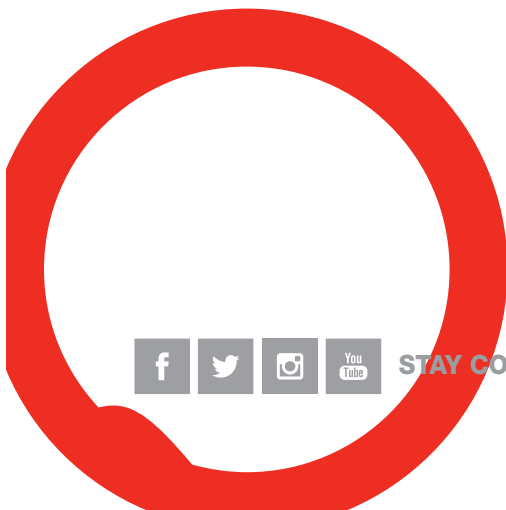

STAY CONNECTED TO RED POWER.