


<b>Car</b>	Mini Cooper S F56	<b>Part No.</b>	SMNS017
<b>Year</b>	2014-2018	<b>Fit Kits</b>	341FK
<b>Notes</b>	Where not supplied use original fittings	<b>Features</b>	Pipe Diameter:- 76mm


Estimated Fitting Time: 60 Minutes

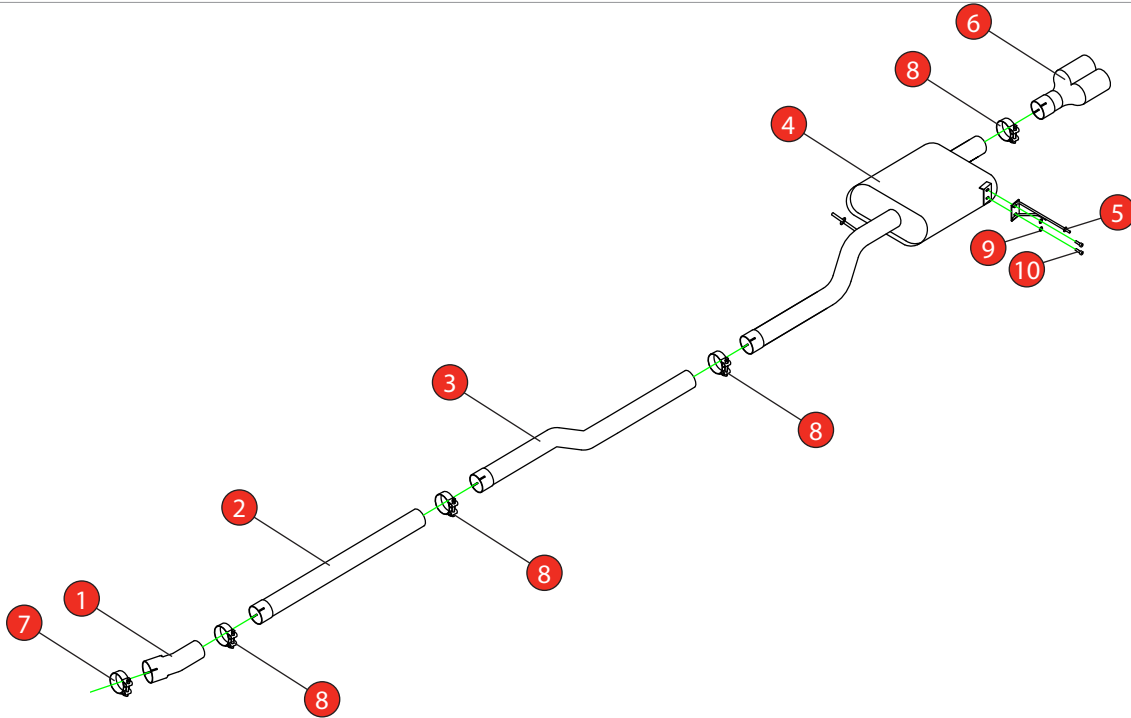

NO.	PART NO.	DESCRIPTION	QTY
1	774BM	Adaptor to Original and Scorpion Downpipe	1
2	770BM	Non-resonated Centre Section	1
3	771BM	Link Pipe	1
4	772BM	Rear Silencer	1
5	773BM	Mounting Bracket	1
6	Z043.10206	Twin Ø90mm STW Polished Trim	1
<b>Fit Kit</b>			
7	Z016.10063	72mm H/D Clamp	1
8	Z016.10062	79mm H/D Clamp	4
9	Z017.10831	M8 x 17mm Washer	2
10	Z017.10070	M8 x 12mm Cap Head Bolt	2
11	Z026.20232	Ø25 x 5mm Alloy Spacer	2

E-MARK	N/A
DATE	22/10/19
ISSUE	00
AUTHORISED	M.Ydlibi

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

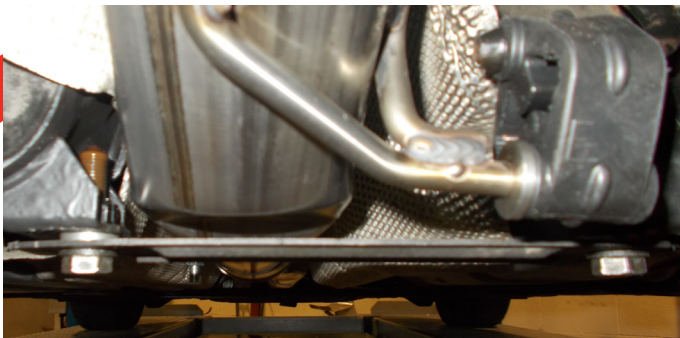

Use the Ø25 x 5mm alloy spacer (item 11) to create more clearance from the cross member at the rear of the car.



STAY CONNECTED TO RED POWER.