
]	FITTING INSTRUCTIONS		
CAR	Skoda Octavia vRS 2.0TSI	PART NO.	SSKC003	
YEAR	2013-2018	FIT KITS	153FK	
NOTES	Where not supplied use original fittings.	FEATURES	Pipe diameter:- 76mm/3"	

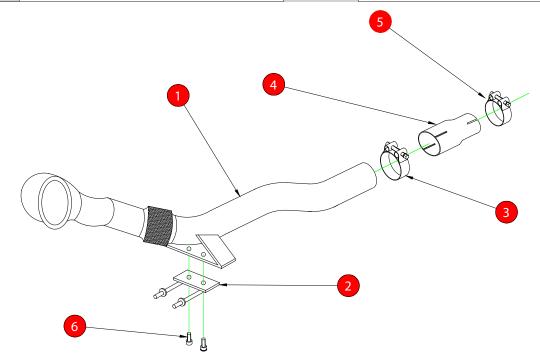

NO.	PART NO.	DESCRIPTION	QTY	CLASSIFICATION	Motorsport Use Only
1	692VW	Turbo Downpipe De-cat	1	HOMOLOGATED	No
2	562AU	Mounting Bracket	1	ISSUE	04
Fit Kit	1	i	DATE	26/05/20	
3	Z016.10062	79mm H/D Clamp	1	AUTHORISED	M.YDLIBI
4	AD69	Adaptor (Only needed to fit to O.E not Scorpion Cat back)	1		
5	Z016.10064	65mm H/D Clamp	1		
6	Z017.10808	M8x16mm Cap Head Bolts	2		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Fitting Note:

Remove Lambda probe from Original exhaust and refit into Lambda boss on Scorpion exhaust.

