



| | | | |
|-------|--|----------|-------------------------|
| CAR | Volkswagen Golf Mk5 R32 3.2 V6 4WD | PART NO. | SVW039 |
| YEAR | 05-08 | FIT KITS | 094 FK |
| NOTES | Where not supplied use original fittings | FEATURES | Pipe diameter:- 76mm/3" |

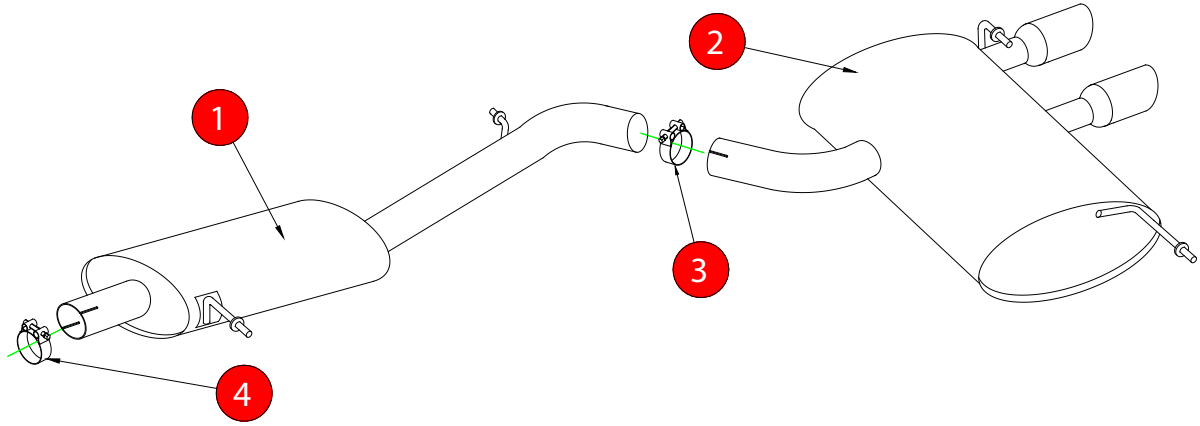

| NO. | PART NO. | DESCRIPTION | QTY |
|---------|------------|-----------------|-----|
| 1 | 604VW | Centre Silencer | 1 |
| 2 | 606VW | Rear Silencer | 1 |
| Fit Kit | | | |
| 3 | Z016.10062 | 79mm H/D Clamp | 1 |
| 4 | Z016.10001 | 59-63mm Clamp | 1 |
| 5 | Z026.20049 | 5mm spacer | 4 |

| | |
|------------|----------|
| E-MARK | N/A |
| DATE | 12/07/12 |
| ISSUE | 01 |
| AUTHORISED | T.ROWLEY |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

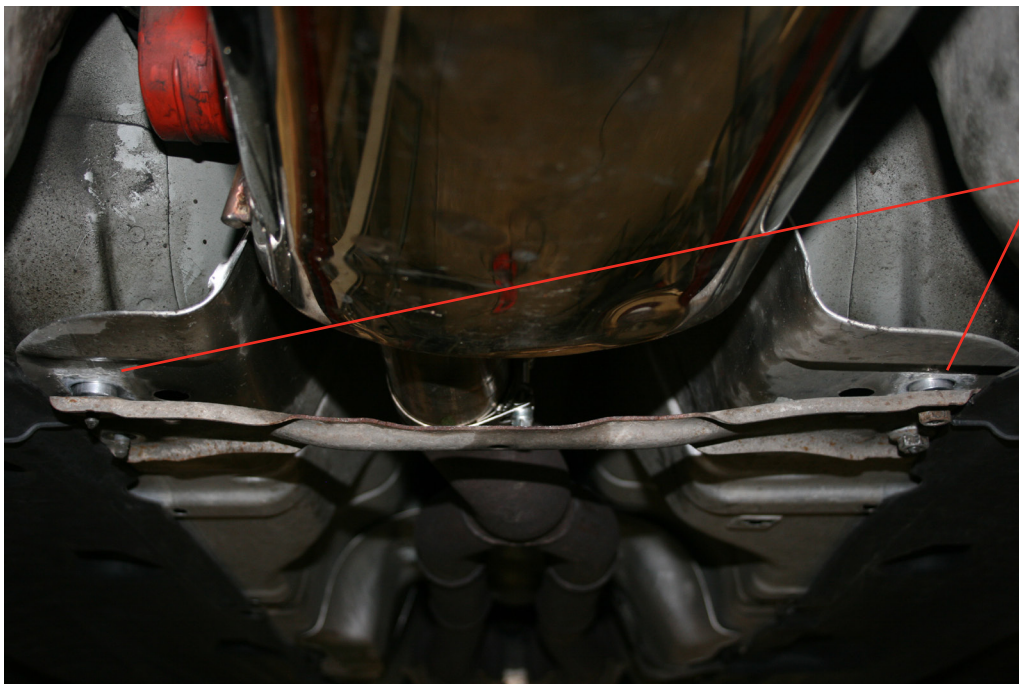

Attach 5mm Spacer using O.E nut as shown here, use one spacer on each bolt, 4 O.E bolts in total

Checked By _____