


SCORPION // FITTING INSTRUCTIONS



| Car | Volkswagen Scirocco R 2.0 TSi | Part No. | SVW072CF |
|-------|--|----------|----------------------|
| Year | 2009-2017 | Fit Kits | 093FK |
| Notes | Where not supplied use original fittings | Features | Pipe Diameter:- 76mm |

Estimated Fitting Time: 60 Minutes

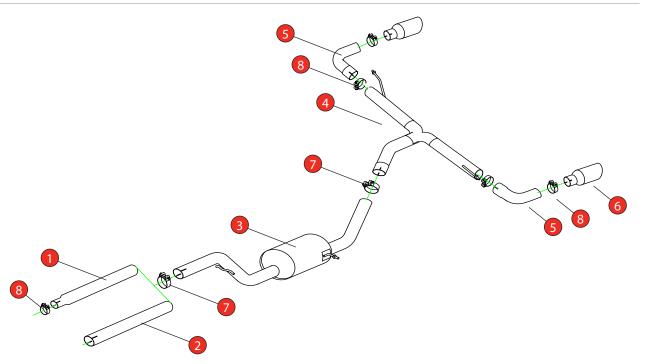

| NO. | PART NO. | DESCRIPTION | QTY | HOMOLOGATED | |
|---------|------------|--|-----|-------------|--|
| 1 | 619VW | Link Pipe (to fit to original front section) | 1 | DATE | |
| 2 | 586VW | Link Pipe (to fit to Scorpion front section) | 1 | ISSUE | |
| 3 | 588VW | Resonated Centre Section | 1 | AUTHORISED | |
| 4 | 819VW | Rear Silencer Delete | 1 | | |
| 5 | 691BM | Trim Connecting Pipe | 2 | | |
| 6 | Z023.10159 | Ø100mm Carbon Fibre Ascari Trim | 2 | | |
| Fit Kit | | | | | |
| 7 | Z016.10062 | 79.2mm H/D Clamp | 2 | | |
| 8 | Z016.10064 | 63-68mm H/D Clamp | 5 | | |
| 9 | Z016.10057 | Hanging Rubber | 1 | | |

HOMOLOGATED NO DATE 12/07/2022 ISSUE 00 AUTHORISED S Shipley

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY. Before removing the original exhaust you need to disconnect the pneumatic valve hose. We recommend you use a small bolt or similar item to plug the hose and to fasten it out of sight.



STAY CONNECTED TO RED POWER.

You Tube

С