


SCORPION // FITTING INSTRUCTIONS



Car	Volkswagen Scirocco R 2.0 TSi	Part No.	SVWS072
Year	2009-2017	Fit Kits	093FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm

Estimated Fitting Time: 60 Minutes

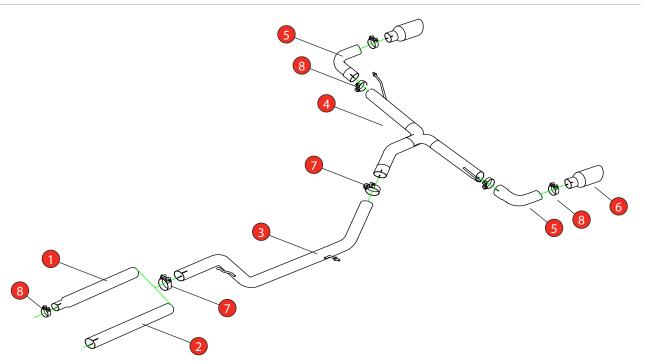

NO.	PART NO.	DESCRIPTION	QTY	HOMOLOGATED	
1	619VW	Link Pipe (to fit to original front section)	1	DATE	
2	586VW	Link Pipe (to fit to Scorpion front section)	1	ISSUE	
3	590VW	Non-resonated Centre Section	1	AUTHORISED	
_			1		
4	819VW	Rear Silencer Delete	1		
5	691BM	Trim Connecting Pipe	2		
6	Z023.10061	Ø100mm Polished Daytona Trim	2		
Fit Kit					
7	Z016.10062	79.2mm H/D Clamp	2		
8	Z016.10064	63-68mm H/D Clamp	5		
9	Z016.10057	Hanging Rubber	1		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY. Before removing the original exhaust you need to disconnect the pneumatic valve hose. We recommend you use a small bolt or similar item to plug the hose and to fasten it out of sight.



NO 12/07/2022 00 S Shipley

You Tube

С