


## **SCORPION** // FITTING INSTRUCTIONS

## HAND BUILT

Car	Audi TT Mk1 3.2 V6	Part No.	SAU042			
Year	1999-2006	Fit Kits	151FK			
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 70mm			
Estimated Fitting Time: 2 Hours						

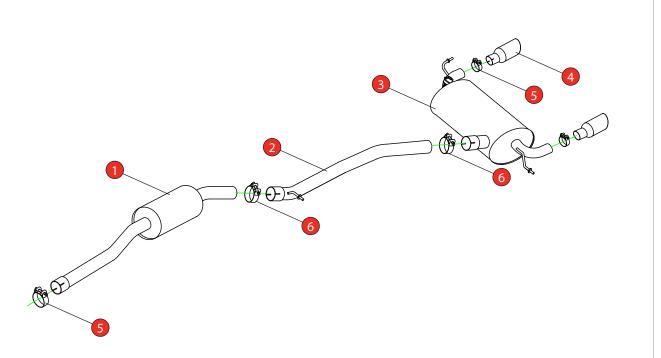

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A				
1	538AU	Resonated Centre Section	1	DATE	09/11/17				
2	715AU	Link Pipe	1	ISSUE	02				
			-	AUTHORISED	M.Ydlibi				
3	717AU	Rear Silencer	1						
4	Z023.10061	Polished Daytona Trim	2						
Fit Kit	t								
5	Z016.10064	63-68mm H/D Clamp	3						
6	Z016.10063	72mm H/D Clamp	2						
NOTE F	NOTE ENGLIDE COORDION OVICTEM IS OF FAD OF MOVING PARTS AND ALL OPICINAL EUNOTIONO WORK CORRECTLY								

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



Once the Scorpion system is fitted re-route the vacuum valve hose back on itself, then through the hole in the heat shield as shown in the image, once re-routed connect the hose to the Scorpion valve.

