


SCORPION // FITTING INSTRUCTIONS



Car	Audi TTS MK2 2.0 TFSI	Part No.	SAUC026
Year	2008-2014	Fit Kits	002FK
Notes	where not supplied use original fittings. 690AU has a long swage which allows adjustment when fitting this product.		Pipe Diameter:- 70mm

Estimated Fitting Time: 4 Hours

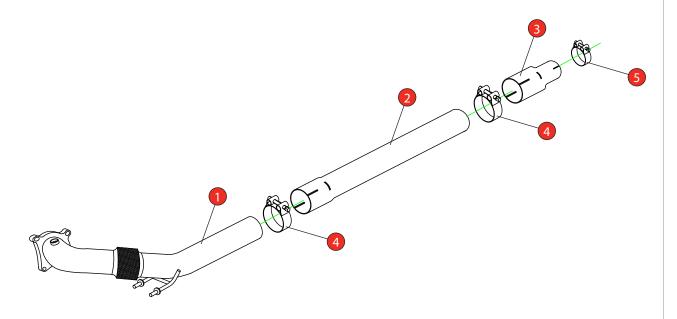

NO.	PART NO.	DESCRIPTION	QTY	
1	421AU	De-cat Downpipe	1	
2	690AU	Front Link Pipe	1	
Fit Kit				
3	AD76	Adaptor (USE TO FIT TO O.E SYSTEM)	1	
4	Z016.10063	72mm H/D Clamp	2	
5	Z016.10001	59-63mm Clamp (USE TO FIT TO O.E SYSTEM)	1	

CLASSIFICATION	Motorsport Use Only	
HOMOLOGATED	No	
DATE	19/05/17	
ISSUE	04	
AUTHORISED	M.Ydlibi	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

