


**SCORPION // FITTING INSTRUCTIONS** 

## HAND BUILT

| Car                                | BMW M135i 3.0L (F20)                                | Part No. | SBM066                  |  |  |  |
|------------------------------------|---|----------|-------------------------|--|--|--|
| Year                               | 2012-2015   | Fit Kits | 252FK                   |  |  |  |
| Notes                              | Use original 'V' clamp to mount system to downpipe. | Features | Pipe Diameter:- 3"/76mm |  |  |  |
| Estimated Fitting Time: 60 Minutes |   |          |                         |  |  |  |

## The rotation of item 3 will align the tailpipes on the rear silencer.

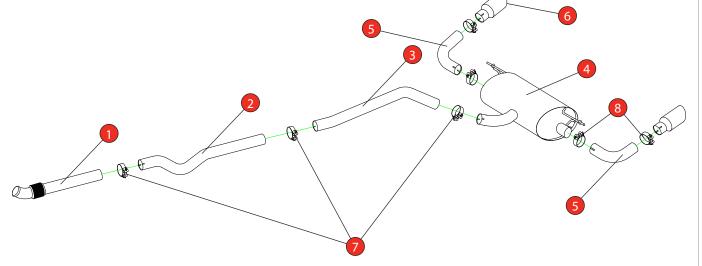

## After the O.E valve is removed use a cable tie to fasten the electronic valve cable out of sight.

| NO.    | PART NO.   | DESCRIPTION           | QTY |
|--------|------------|-----------------------|-----|
| 1      | 687BM      | Front Flex Pipe       | 1   |
| 2      | 688BM      | Front Pipe            | 1   |
| 3      | 689BM      | Link Pipe             | 1   |
| 4      | 690BM      | Rear Silencer         | 1   |
| 5      | 691BM      | Trim Connecting Pipe  | 2   |
| 6      | Z023.10156 | Polished Daytona Trim | 2   |
| Fit Ki | it         |                       |     |
| 7      | Z016.10062 | 79.2mm H/D Clamp      | 3   |
| 8      | Z016.10064 | 65.9mm H/D Clamp      | 4   |
| 9      | Z017.12732 | Cable Tie             | 1   |

|   | E-MARK     | N/A      |
|---|------------|----------|
|   | DATE       | 23/08/16 |
| 1 | ISSUE      | 03       |
|   | AUTHORISED | M.Ydlibi |
|   |            |          |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK COR-

After initial run the system may grow causing the tailpipes to come out of line. Allow the system to cool before adjusting.



STAY CONNECTED TO RED POWER.